


Woodbrick® Installation Instructions

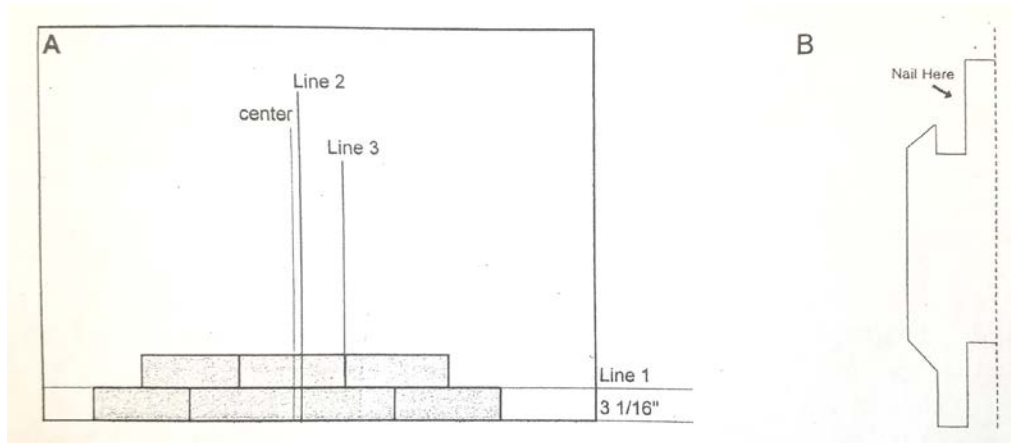

SURFACE PREPARATION:

Surfaces to which Woodbrick is to be applied should be flat and smooth. We recommend sheetrock, or preferably plywood or chipboard.

- 1) For ease of application, we recommend the use of a Woodbrick base moulding designed specifically to accept the Woodbrick. Simply level the Woodbrick base moulding along the floor and proceed with application as shown. If you do not use the Woodbrick base moulding, make a level line 3 1/16" off the floor of the area you are covering (Line 1). Note: If the floor is uneven, be sure line is leveled 3 1/16" above the highest point of your floor.
- 2) Mark center, then make a plumb line 1/4" to the right (Line 2) and 6" to the right (Line 3) of the center line.
- 3) Line up the female end of the Woodbrick with the plumb line 1/4" off center (Line 2). For best results, we recommend nailing. Fasten each Woodbrick by nailing through the top flange or apply adhesive to the back of each Woodbrick (see B). Lay both ways from the center, and be sure to finish each row before going on to the next row.
- 4) For the next row, set the female end of the Woodbrick on plumb line 6" right of center (Line 3) and again, lay your Woodbricks both ways from the center. Simply continue to alternate subsequent rows in this manner.
- 5) For a wainscot effect, a custom Woodbrick chair rail is available which plugs on to the top row of Woodbricks for a finishing touch. Also, custom Woodbrick inside and outside corners are available from Cook Lumber to give a finished and professional appearance.

CAUTION:

Woodbricks are combustible. For fireplace applications, consult the fireplace manufacturer's instructions regarding clearance required from hot areas. Also, check local building codes for any application near heating devices.



Cook Lumber
www.CookLumber.com